

ITALIANO

NEDERLANDS

DEUTSCH

FRANÇAIS

ENGLISH



marantz[®] 8 Channel Power Amplifier **MM8003**

User Guide

ENGLISH

WARRANTY

For warranty information, contact your local Marantz distributor.

RETAIN YOUR PURCHASE RECEIPT

Your purchase receipt is your permanent record of a valuable purchase. It should be kept in a safe place to be referred to as necessary for insurance purposes or when corresponding with Marantz.

IMPORTANT

When seeking warranty service, it is the responsibility of the consumer to establish proof and date of purchase. Your purchase receipt or invoice is adequate for such proof.

FOR U.K. ONLY

This undertaking is in addition to a consumer's statutory rights and does not affect those rights in any way.

FRANÇAIS

GARANTIE

Pour des informations sur la garantie, contacter le distributeur local Marantz.

CONSERVER L'ATTESTATION D'ACHAT

L'attestation d'achat est la preuve permanente d'un achat de valeur. La conserver en lieu sûr pour s'y reporter aux fins d'obtention d'une couverture d'assurance ou dans le cadre de correspondances avec Marantz.

IMPORTANT

Pour l'obtention d'un service couvert par la garantie, il incombe au client d'établir la preuve de l'achat et d'en corroborer la date. Le reçu ou la facture constituent des preuves suffisantes.

DEUTSCH

GARANTIE

Bei Garantiefragen wenden Sie sich bitte an Ihren Marantz-Händler.

HEBEN SIE IHRE QUITTING GUT AUF

Die Quittung dient Ihnen als bleibende Unterlage für Ihren wertvollen Einkauf. Das Aufbewahren der Quittung ist wichtig, da die darin enthaltenen Angaben für Versicherungszwecke oder bei Korrespondenz mit Marantz angeführt werden müssen.

WICHTIG!

Bei Garantiefragen muß der Kunde eine Kaufunterlage mit Kaufdatum vorlegen. Ihren Quittung oder Rechnung ist als Unterlage ausreichend.

NEDERLANDS

GARANTIE

Voor inlichtingen omtrent garantie dient u zich tot uw plaatselijke Marantz.

UW KWITANTIE, KASSABON E.D. BEWAREN

Uw kwitantie, kassabon e.d. vormen uw bewijs van aankoop van een waardevol artikel en dienen op een veilige plaats bewaard te worden voor evt, verwijzing bijv, in verband met verzekering of bij correspondentie met Marantz.

BELANGRIJK

Bij een evt, beroep op de garantie is het de verantwoordelijkheid van de consument een gedateerd bewijs van aankoop te tonen. Uw kassabon of factuur zijn voldoende bewijs.

ITALIANO

GARANZIA

L'apparecchio è coperto da una garanzia di buon funzionamento della durata di un anno, o del periodo previsto dalla legge, a partire dalla data di acquisto comprovata da un documento attestante il nominativo del Rivenditore e la data di vendita. La garanzia sarà prestata con la sostituzione o la riparazione gratuita delle parti difettose.

Non sono coperti da garanzia difetti derivanti da uso improprio, errata installazione, manutenzione effettuata da personale non autorizzato o, comunque, da circostanze che non possano riferirsi a difetti di funzionamento dell'apparecchio. Sono inoltre esclusi dalla garanzia gli interventi inerenti l'installazione e l'allacciamento agli impianti di alimentazione.

Gli apparecchi verranno riparati presso i nostri Centri di Assistenza Autorizzati. Le spese ed i rischi di trasporto sono a carico del cliente.

La casa costruttrice declina ogni responsabilità per danni diretti o indiretti provocati dalla inosservanza delle prescrizioni di installazione, uso e manutenzione dettagliate nel presente manuale o per guasti dovuti ad uso continuato a fini professionali.

CE MARKING



English

The MM8003 is in conformity with the EMC directive and low-voltage directive.



Français

Le MM8003 est conforme à la directive EMC et à la directive sur les basses tensions.



Deutsch

Das Modell MM8003 entspricht den EMC-Richtlinien und den Richtlinien für Niederspannungsgeräte.



Nederlands

De MM8003 voldoet aan de EMC eisen en de vereisten voor laag-voltage.



Italiano

Il MM8003 è conforme alle direttive CEE ed a quelle per i bassi voltaggi.

English

WARNINGS

- Do not expose the equipment to rain, moisture, dripping or splashing.
- Do not remove the cover from the equipment.
- Do not insert anything into the equipment through the ventilation holes.
- Do not handle the mains cord with wet hands.
- Do not cover the ventilation with any items such as tablecloths, newspapers, curtains, etc.
- No naked flame sources, such as lighted candles, should be placed on the equipment.
- When disposing of used batteries, please comply with governmental regulations or environmental public instruction's rules that apply in your country or area.
- Make a space of about 0.2 meter around the unit.
- No objects filled with liquids, such as vases, shall be placed on the equipment.
- When the switch is in the OFF position, the equipment is not completely switched off from MAINS.
- The equipment shall be installed near the power supply so that the power supply is easily accessible.
- Do not touch hot spots during and immediately after use.
- During and immediately after use, this product is hot in areas other than the controls and rear panel connection jacks. Do not touch hot spots and especially the top panel. Contact with hot areas can cause burns.
- Do not expose the unit to excessive heat such as direct sunlight, fire or the like.

Français

AVERTISSEMENTS

- Ne pas exposer l'appareil à la pluie, à l'humidité, à l'égouttement ou aux éclaboussures.
- Ne pas essayer de retirer le boîtier de l'appareil.
- Ne rien insérer dans l'appareil par les orifices de ventilation.
- Ne pas manipuler le cordon d'alimentation avec les mains mouillées.
- Ne pas couvrir les ouïes de ventilation avec un objet quelconque comme une nappe, un journal, un rideau, etc.
- Ne placer aucune source de flamme nue, comme une bougie allumée, sur l'appareil.
- Pour mettre au rebut les piles usées, respecter les lois gouvernementales ou les règlements officiels concernant l'environnement qui s'appliquent à votre pays ou région.
- Veiller à ce qu'aucun objet ne soit à moins de 0,2 mètre des côtés de l'appareil.
- Aucun objet rempli de liquide, un vase par exemple, ne doit être placé sur l'appareil.
- Lorsque l'interrupteur est sur la position OFF, l'appareil n'est pas complètement déconnecté du SECTEUR (MAINS).
- L'appareil sera installé près de la source d'alimentation, de sorte que cette dernière soit facilement accessible.
- Ne pas toucher aux zones chaudes pendant et immédiatement après l'utilisation.
- Pendant l'utilisation et immédiatement après, cet appareil est chaud en dehors des commandes et des prises de raccordement arrière. Ne pas toucher aux zones chaudes, et particulièrement au panneau supérieur, pour éviter tout risque de brûlure.
- Ne pas exposer l'appareil à une chaleur excessive, comme celle des rayons directs du soleil, d'un feu, etc.

Deutsch

WARNHINWEISE

- Das Gerät nicht Regen, Feuchtigkeit, Tropf- oder Spritzwasser aussetzen.
- Die Abdeckung nicht vom Gerät abnehmen.
- Keine Gegenstände durch die Belüftungsschlitze stecken.
- Das Netzkabel nicht mit feuchten oder nassen Händen anfassen.
- Decken Sie die Lüftungsöffnungen nicht mit einem Tischtuch, einer Zeitung, einem Vorhang usw. ab.
- Es dürfen keine Gegenstände mit offener Flamme, wie etwa brennende Kerzen, auf dem Gerät aufgestellt werden.
- Beachten Sie bei der Entsorgung der verbrauchten Batterien alle geltenden lokalen und überregionalen Regelungen.
- Auf allen Geräteseiten muß ein Zwischenraum von ungefähr 0,2 meter vorhanden sein.
- Auf das Gerät dürfen keine mit Flüssigkeiten gefüllte Behälter, wie etwa eine Vase, gestellt werden.
- Wenn der Schalter ausgeschaltet ist (OFF-Position), ist das Gerät nicht vollständig vom Stromnetz (MAINS) abgetrennt.
- Das Gerät sollte in der Nähe einer Netzsteckdose aufgestellt werden, damit es leicht an das Stromnetz angeschlossen werden kann.
- Berühren Sie während oder unmittelbar nach dem Gebrauch keine heißen Stellen des Gerätes.
- Während oder unmittelbar nach dem Gebrauch ist dieses Produkt mit Ausnahme der Bedienelemente und der Anschlussbuchsen auf der Rückseite heiß. Berühren Sie die heißen Stellen und insbesondere die Oberseite nicht. Der Kontakt mit heißen Flächen kann zu Verbrennungen führen.
- Setzen Sie das Gerät keiner übermäßigen Wärme aus, z.B. durch Aufstellung in direkter Sonneneinstrahlung, in der Nähe eines offenen Feuers usw.

Nederlands

WAARSCHUWINGEN

- Stel het apparaat niet bloot aan regen, vocht, druppels of spetters.
- Verwijder de afdekplaat van het apparaat niet.
- Duw niets door de ventilatieopeningen in het apparaat.
- Raak het netsnoer niet met natte handen aan.
- Bedek de ventilatieopeningen niet met enige voorwerpen, zoals tafelkleden, kranten, gordijnen, enz.
- Plaats geen brandende voorwerpen, zoals kaarsen, op het apparaat.
- Volg bij het weggooiën van verbruikte batterijen de overheidswetgeving of milieuvorschriften op die van kracht zijn in het land of de regio waarin u zich bevindt.
- Zorg dat er 0,2 meter vrije ruimte rond het toestel is.
- Plaats geen voorwerpen met een vloeistof erin, zoals een bloemenvaas, op het apparaat.
- Als de schakelaar op OFF staat, is het apparaat niet volledig losgekoppeld van de netspanning (MAINS).
- De apparatuur wordt in de buurt van het stopcontact geïnstalleerd, zodat dit altijd gemakkelijk toegankelijk is.
- Raak hete gedeelten van het apparaat niet aan tijdens en onmiddellijk na het gebruik.
- Tijdens en onmiddellijk na het gebruik is dit product heet, behalve in de omgeving van de bedieningstoetsen en de aansluitingen op het achterpaneel. Raak geen hete plekken aan, vooral niet het bovenpaneel. Contact met hete plekken kan brandwonden veroorzaken.
- Stel het apparaat niet bloot aan grote warmte, zoals direct zonlicht, vuur en dergelijke.

Italiano

AVVERTENZE

- Non esporre l'apparecchio alla pioggia, all'umidità, al gocciolamento o agli spruzzi.
- Non rimuovere il coperchio dell'apparecchio.
- Non introdurre oggetti all'interno dell'apparecchio attraverso i fori di ventilazione.
- Non toccare il cavo di alimentazione con le mani bagnate.
- Non coprire le fessure di ventilazione con tovaglie, giornali, tende od oggetti analoghi.
- Non posare sull'apparecchio sorgenti di fiamme scoperte quali candele accese.
- Smaltire le pile usate in conformità alle norme governative o disposizioni ambientali vigenti nel proprio paese o zona.
- Lasciare 0,2 metro liberi tutto intorno l'unità.
- Non mettere sull'apparecchiatura alcun contenitore di liquido, come ad esempio dei vasi.
- Quando l'interruttore è nella posizione OFF, l'apparecchiatura non è completamente scollegata da MAINS.
- L'apparecchio va installato in prossimità della fonte di alimentazione, in modo che quest'ultima sia facilmente accessibile.
- Non toccare i punti caldi né durante, né immediatamente dopo l'uso.
- Durante, e subito dopo l'utilizzo, questo prodotto risulta essere molto caldo in alcune sue parti come ad esempio i connettori del pannello posteriore. Non toccare i punti caldi e specialmente la superficie del pannello. Il contatto con parti calde può provocare ustioni.
- Non esporre l'unità ad eccessivo calore come la luce diretta del sole, il fuoco o simili.

AMP_070719N1


INTRODUCTION

Thank you very much for purchasing this model MM8003 8-Channel Power Amplifier from Marantz. This remarkable component has been engineered to provide you with many years of home theater enjoyment. Please take a few minutes to read this manual thoroughly before you connect and operate the MM8003. As there are a number of connection and configuration options, you are encouraged to discuss your own particular home theater setup with your Marantz A/V specialist dealer.

ACCESSORIES CHECK

Before use, check the below accessories were included in the package.

AC power cable

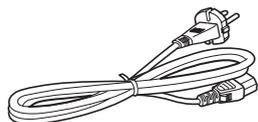

Remote control cable



User Guide



A NOTE ABOUT RECYCLING



This product's packaging materials are recyclable and can be reused. This product and the accessories packed together are the applicable product to the WEEE directive except batteries. Please dispose of any materials in accordance with your local recycling regulations. When discarding the unit, comply with your local rules or regulations. Batteries should never be thrown away or incinerated but disposed of in accordance with your local regulations concerning chemical wastes.

CONTENTS

INTRODUCTION	1	OPERATION	8
ACCESSORIES CHECK	1	TURNING ON THE POWER	8
CONTENTS	1	TURNING THE POWER OFF	8
FEATURES	2	ADVANCED CONNECTIONS	9
BEFORE USE	2	BI-AMPLIFIER CONNECTIONS	9
NAMES AND FUNCTION	3	MULTI ZONE SPEAKER CONNECTIONS	10
FRONT PANEL	3	MULTI ZONE CONNECTIONS	11
REAR PANEL	3	REMOTE CONTROL CONNECTIONS	12
BASIC CONNECTIONS	4	CONNECTIONS WITH EXTERNAL CONTROL	
PREPARING THE CONNECTION CABLES	4	COMPONENTS	12
INPUT CONNECTOR SWITCHING	4	TROUBLESHOOTING	13
AV8003 CONNECTIONS	5	RESETTING THE AMPLIFIER	13
SPEAKER CONNECTIONS	6	OTHERS	14
POWER CABLE CONNECTION	7	SPECIFICATIONS	14

FEATURES

This 8-channel power amplifier comes with upgraded functions and supports the latest format of surround sound without compromising the design technology of Marantz's flagship models.

Current feedback type of discrete power amplifier with high sound quality

The MM8003 features in all 8 channels the current feedback type of power amplifier, which uses the complementary push-pull circuitry incorporated in Marantz's SM-11S1 Hi-Fi Power Amplifier. This improves the model's operating stability and enables it to achieve high-density, high-speed sound reproduction across a wide sound range.

In the rear section the power amplifier is a current/voltage conversion amplifier unit that employs a Wilson current mirror circuit for amplifying sound up to the treble range at low distortion levels.

Improved instantaneous current supply capability

In the rear section of the power amplifier is the LAPT (high-performance power transistor), which is featured in Marantz's model SM-11S1 Hi-Fi Power Amplifier. This device improves the instantaneous current supply capability.

Copper bus bars are featured in the unit that supplies the power to each channel.

The power supply unit has a large toroidal transformer that delivers low levels of noise and leakage flux thanks to its internal structural features such as its laminated core, silicon steel-plated core ring, etc., and the use of its shielded casing.

Original Marantz parts with a combined capacitance of 100,000 μF (50,000 $\mu\text{F}/71\text{V} \times 2$), which have been specially crafted to achieve the maximum in terms of sound quality, are employed in the block capacitor, a key component of the power supply unit.

Thanks to the improvements in the current supply capability of these parts, you can enjoy high-powered sound brimming with ambiance.

High-sound-quality design based on the pure surround concept

A chimney-type heat sink and extremely quiet cooling fan deal with the heat that is discharged from the 8-channel amplifier to a high degree of efficiency. A high-precision temperature sensor IC is used to adjust the rotational speed of the cooling fan in response to the changes in the amount of heat generated by the amplifier.

These features together make for lavish specifications well suited to the amplifier's use in high-end theater systems, which are engineered to ensure virtually noiseless operation.

The amplifier's chassis is copper-plated to protect the analog audio circuitry from high-frequency noise. This is an important technological aspect for reproducing sound without compromising the delicately nuanced sound fields of Super Audio.

In addition, top-of-the-line audio capacitors, film capacitors and other high-quality components are used to achieve a high-sound-quality design.

BALANCED/UNBALANCED switching function

This function makes it possible to select BALANCED or UNBALANCED input each channel depending on the application.

Remote power control

By connecting the amplifier to Marantz's model AV8003 AV pre-tuner, the amplifier's power can be switched on or off in tandem with the power on/off operation of the AV8003 using the remote power control function.

A floating ground connection that doesn't form a ground loop is used for the connection with the AV8003 so the sound quality is not adversely affected.

Other functions

Also provided are an IR flasher input connector to support customized installation, and DC trigger input connector and output connectors.

BEFORE USE

This section must be read before any connection is made to the mains supply.

EQUIPMENT MAINS WORKING SETTING

Your Marantz product has been prepared to comply with the household power and safety requirements that exist in your area.

MM8003 can be powered by 230V AC only.

COPYRIGHT

Recording and playback of any material may require consent. For further information refer to the following:


- Copyright Act 1956
- Dramatic and Musical Performers Act 1958
- Performers Protection Acts 1963 and 1972
- Any subsequent statutory enactments and orders

DO NOT LOCATE IN THE FOLLOWING PLACES

To ensure long-lasting use, do not locate the unit where:

- Exposed to direct sunlight.
- Near to sources of heat such as heaters.
- Highly humid or poorly ventilated.
- Dusty.
- Subjected to mechanical vibrations.
- On wobbly, inclined or otherwise unstable surfaces
- Radiated heat is blocked such as in cramped audio racks.

To ensure proper heat radiation, ensure the below clearance from walls and other equipment.

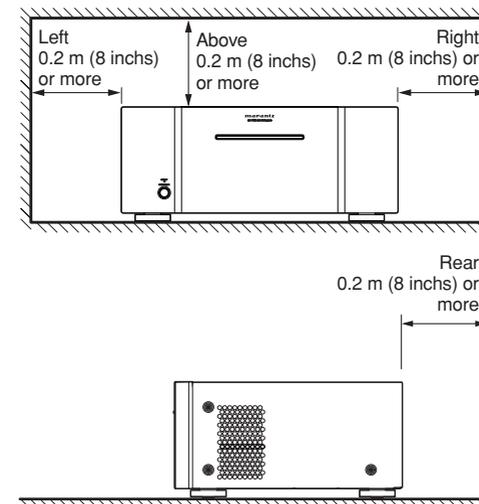

KEEP OBJECTS OFF

Keep objects off the unit. Blocking the vent can result in accident and damage.


DO NOT TOUCH HOT SPOTS DURING AND IMMEDIATELY AFTER USE

During and immediately after use, the unit is hot in areas other than the controls and rear panel connection jacks. Do not touch hot spots and especially the top panel. Contact with hot areas can cause burns.

NAMES AND FUNCTION


For a more detailed description of the functions of each part, refer to the pages given in ().

FRONT PANEL

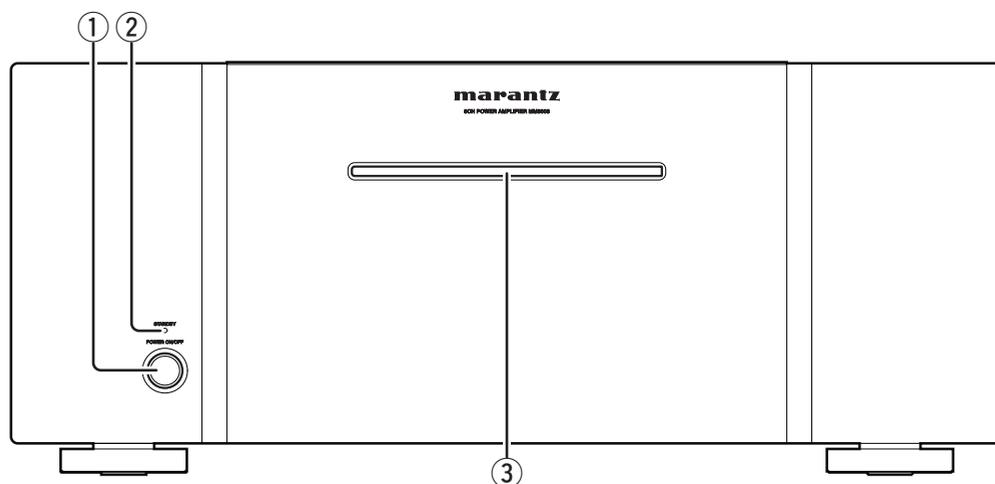

- ① POWER ON/OFF button (page 8)
- ② STANDBY indicator (page 8)
- ③ Illumination lamp (page 8)

REAR PANEL

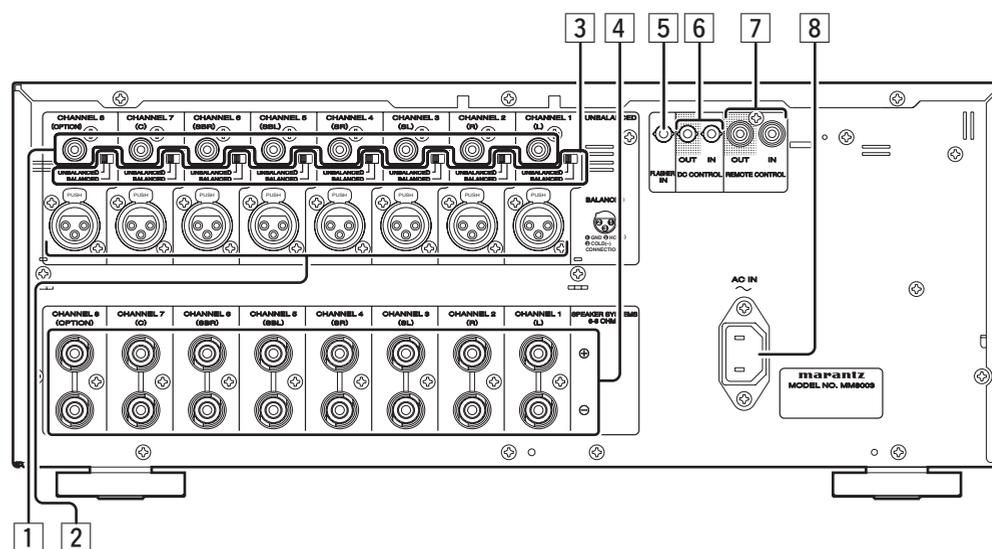

- ① UNBALANCED (RCA) input connectors (page 5)
- ② BALANCED (XLR) input connectors (page 5)
- ③ Input selector switches (page 4)
- ④ SPEAKER SYSTEMS output connectors (page 6)
- ⑤ Flasher input connector (page 12)
- ⑥ DC CONTROL IN/OUT connectors (page 12)
- ⑦ REMOTE CONTROL IN, OUT connectors (page 12)
- ⑧ AC IN socket (page 7)

BASIC CONNECTIONS

NAMES AND FUNCTION

BASIC CONNECTIONS

OPERATION

ADVANCED CONNECTIONS

TROUBLESHOOTING

OTHERS

PREPARING THE CONNECTION CABLES

Provide the cables required by the component to be used.

BALANCED CONNECTIONS

XLR audio cable




① This amplifier uses XLR connectors, which are widely used in professional audio applications, for the BALANCED connectors. Their features are described below.


- Due to their 3-pin construction, the music signals can be transmitted as balanced signals, and the effects of extraneous noise are minimal.
- Their connect/disconnect locking mechanism minimizes any shakiness in the connector area and performs high reliability.

② For professional audio applications, the XLR connectors can be connected in the following two ways.

1. European system (pin ② = hot, pin ③ = cold)

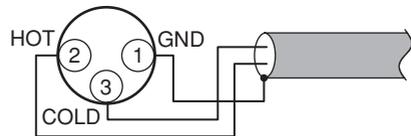

2. U.S. system (pin ② = cold, pin ③ = hot)

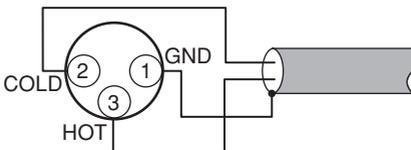

③ The XLR connectors on this amplifier use the European system in 1. above. If a pre-amplifier or control amplifier with connectors using the U.S. system is connected to this amplifier using balanced cables, the signal phase will be reversed.

To correct the signal phase, reverse the connections of pins ② and ③ of the XLR connector at one end of the cable.

UNBALANCED CONNECTIONS

RCA audio cable



REMOTE CONTROL CONNECTIONS


RCA cable (accessory)

(This cable is required to connect the AV8003 or other Marantz component to this amplifier.)




SPEAKER CONNECTIONS

Speaker cable

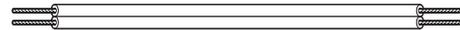

INPUT CONNECTOR SWITCHING

A BALANCED or UNBALANCED input for the input connectors can be selected for each channel.

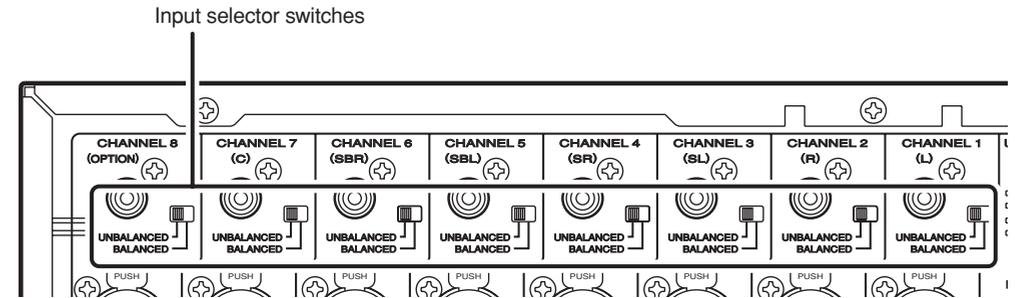

BALANCED:

The XLR audio cable is used for connection with the control amplifier.

UNBALANCED:

The RCA audio cable is used for connection with the control amplifier.

Notes:

- Select the input, whether balanced or unbalanced, before turning on the power. Failure may occur if it is selected after the power has already been turned on.
- If the amplifier input and input selector switch settings are incorrectly matched, no sound will be output from the amplifier.


AV8003 CONNECTIONS

The connection example given below shows the connections between the amplifier and AV8003 AV pre-tuner for basic sound reproduction through 7 channels. When using the **BALANCED** inputs, use the XLR audio cables; when using the **UNBALANCED** inputs, use the RCA audio cables. Connect the **PRE OUT** connectors on the control amplifier to the input connectors on this amplifier. Use this connection example as a reference when a control amplifier other than the AV8003 is to be used.


Notes:

- Do not connect the power cables of this amplifier and other components to the AC outlet until all the connections have been completed.
- Insert the plugs on the connecting cables firmly into the connectors. Noise may be caused by improper connections.
- For details on the components connected to this amplifier, refer to the operating instructions of each component.

BALANCED CONNECTIONS

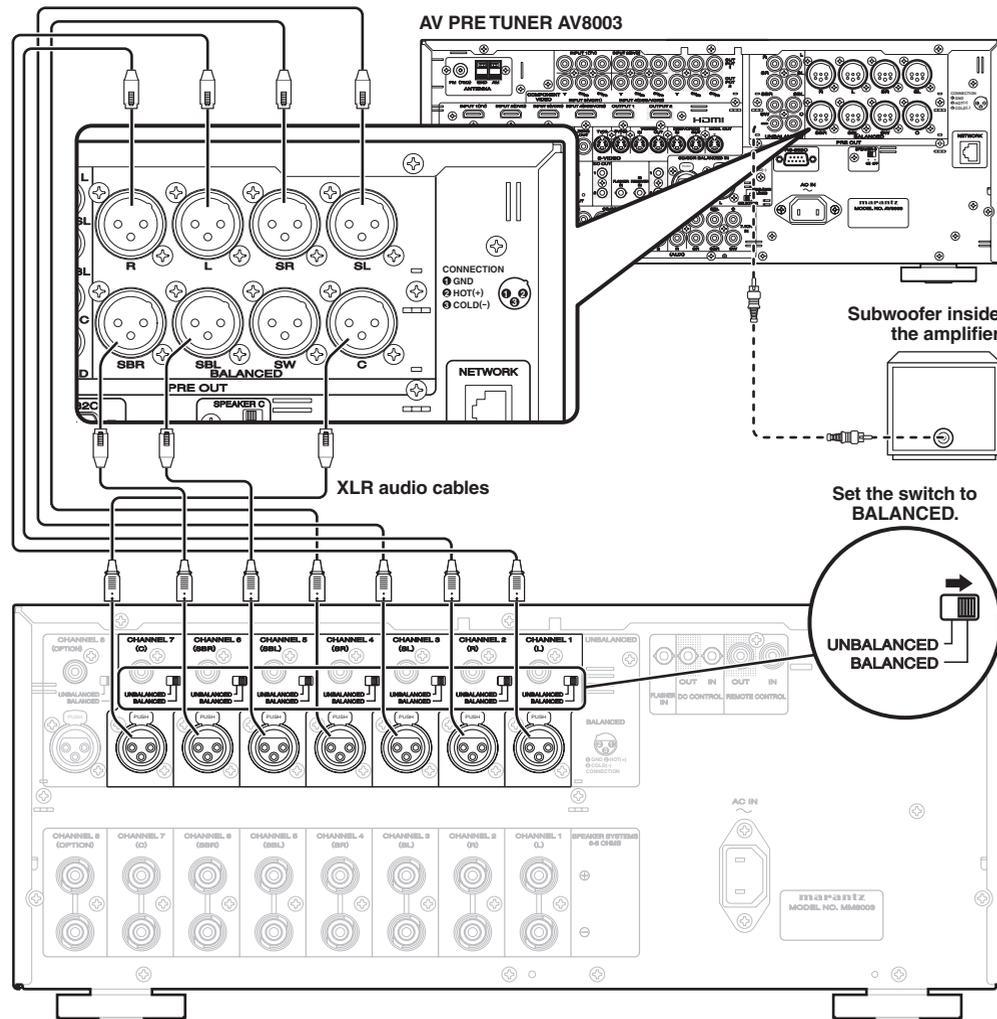


UNBALANCED CONNECTIONS

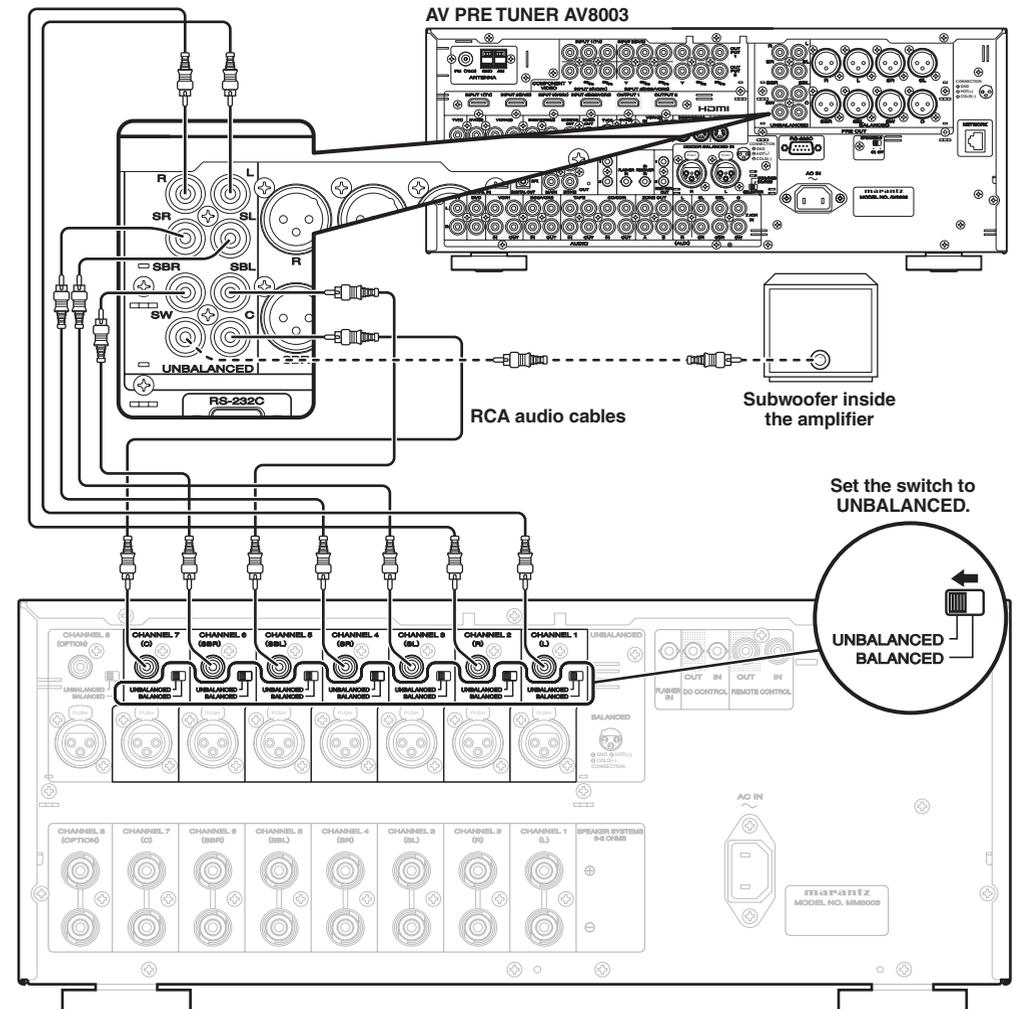

SPEAKER CONNECTIONS

SPEAKER CONNECTIONS

Refer to the figure below, and connect the speakers to the amplifier.

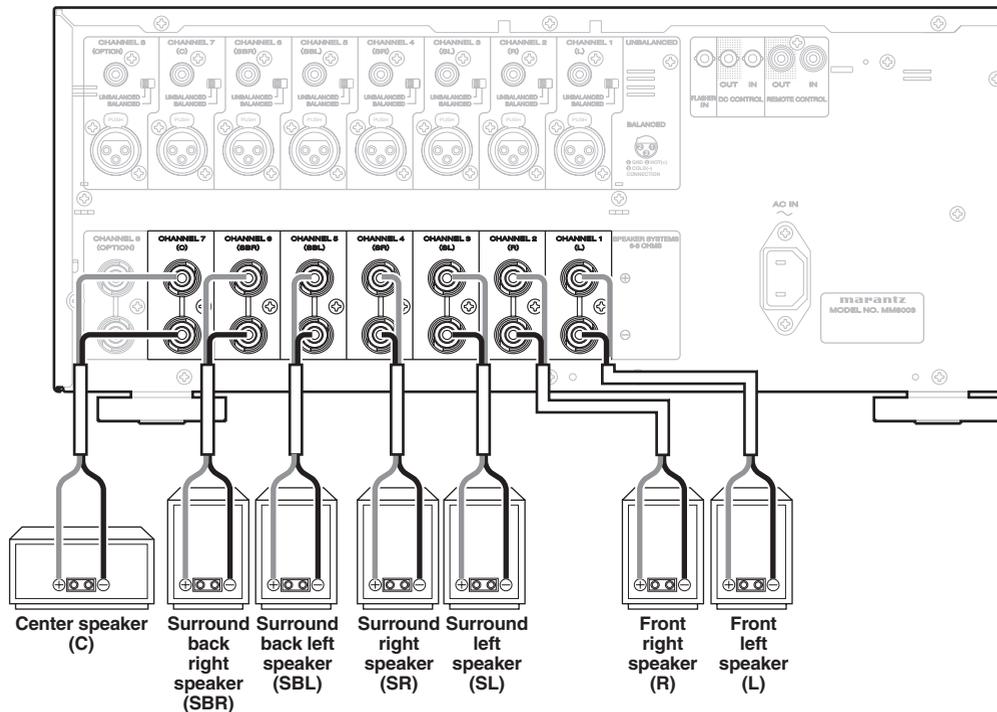


Notes:

- Speakers come with "+" and "-" terminals. When connecting the speakers to the amplifier, connect their "+" terminals to the "+" connectors on the amplifier and, similarly, connect their "-" terminals to the "-" connectors. If a "+" terminal is connected to a "-" connector, the signal phase will be reversed, and the music played through the speakers will sound unnatural. Refer to the operating instructions of the speakers, and properly reconnect the speakers.
- Connect speaker systems with an impedance of at least 6 Ω to the amplifier. If speakers with an impedance of under 6 Ω are used and sound is played at high volume levels for prolonged periods, the amplifier may experience an extreme rise in temperature, tripping the protection circuit.
- If the AV8003 AV pre-tuner is connected to the amplifier and one surround back speaker is to be used, connect the speaker to the surround back left channel (SBL).
If this is the case, the setting must be performed on the AV8003. (For details, refer to the operating instructions of the AV8003.) When using a control amplifier other than the AV8003, follow the operating instructions of the amplifier used, and connect the speaker properly.


SPEAKER CABLES

1. Remove about 10 mm of the covering from the end of the speaker cable.
2. Twist the bare part of the cable tightly to prevent short-circuiting.
3. Turn the speaker connector counterclockwise to loosen it.
4. Insert the bare part of the speaker cable into the hole at the side of the speaker connector.
5. Turn the speaker connector clockwise to tighten it up.

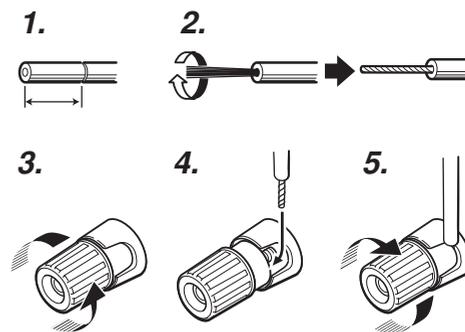

Notes:


- To protect the circuitry from damage, do not connect two bare speaker cables together or allow them to touch any metal parts of the amplifier.

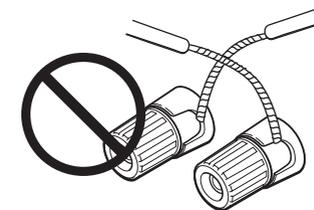

- Due to the risk of electric shock, do not touch the speaker connectors while the power is supplied.

TIPS ON SPEAKER PLACEMENT

How the speakers should be placed depends on the room size and other factors. An example of how the speakers are normally placed and some placement tips are given here.

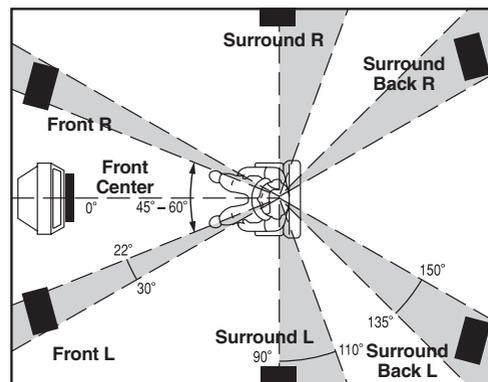

• Front left and right speakers


It is recommended that the front left and right speakers be positioned at an angle of 45 to 60 degrees from each other as viewed from the listening position.

• Center speaker

This speaker is placed so that its front panel is in line with the front panels of the front left and right speakers or slightly behind them.


Height at which to place the front left and right speakers and center speaker

Place the three front speakers (left, right and center) so that their mid-range and high-range units will be positioned at more or less the same height from the floor as much as possible.

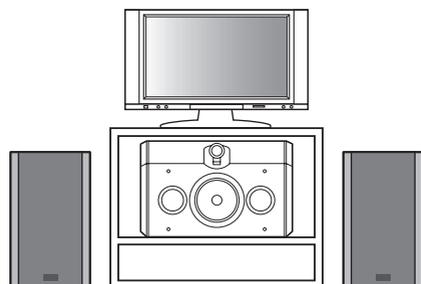

Note:

When placing speakers close to a TV set, use magnetically shielded speakers for the front left and right speakers and center speaker.

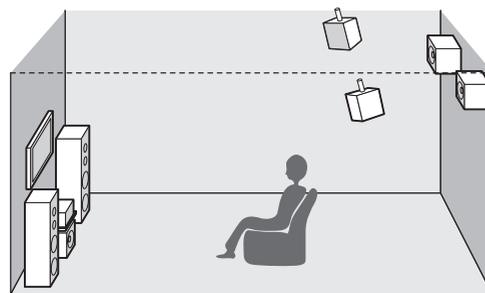

• Surround left and right speakers


These speakers are needed to play surround sound. Place them against the walls in line with the listening position or slightly behind it. Position them so that the center of the speaker front panels point toward the center the room.

• Surround back left and right speakers

Place these speakers behind the listening position as shown in the figure.

Height at which to place the surround left and right speakers and surround back left and right speakers


Place these speakers at a height of 70 cm to 1 meter above the listener. By placing the speakers at this height, the sound source will not be localized at any specific position, and the listener will feel more surrounded and enveloped by the sound.

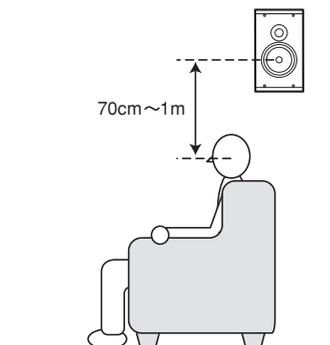

POWER CABLE CONNECTION

Connect the power cable after all the connections have been completed.

1. Plug the accessory power cable into the AC IN socket on the rear panel of the amplifier.

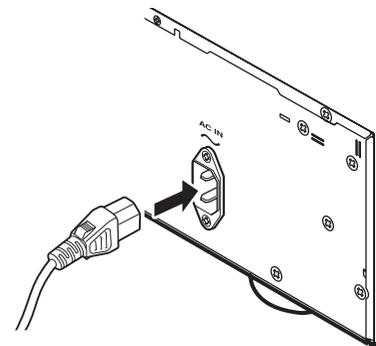

2. Connect the plug on the power cable to the wall socket (AC 230 V, 50 Hz).

* Ensure that the total power consumption of the amplifier and other components connected to the socket does not exceed the capacity of the socket.

Notes:

- Insert the power plug firmly. Noise may be caused by an incomplete connection.
- Do not connect the amplifier to the AC outlet of another product. Product malfunctioning may occur if the capacity of the AC outlet is exceeded.

OPERATION

TURNING THE POWER ON

1. Press the **POWER ON/OFF** switch.
2. Sound is output after the illumination lamp has blinked for about 7 seconds.
The sound output is delayed because of the activation of the muting circuit, which prevents noise from being output until the amplifier's circuitry operates stably after the power has been turned on.
(The illumination lamp is lit while the amplifier is operating.)

Note:


Before turning the power on, turn down the volume controls on the connected components.

TURNING THE POWER OFF

1. Press the **POWER ON/OFF** switch.
2. The illumination lamp goes off and turns the power off.

Note:

- The Standby indicator does not light even when the unit is off.
- By connecting the remote control connectors on the AV8003 and this amplifier, the amplifier can be set to STANDBY ON/OFF synchronized with the STANDBY ON/OFF operations of the AV8003.
For details, refer to REMOTE CONTROL CONNECTIONS (page 12) and the AV8003 user guide.

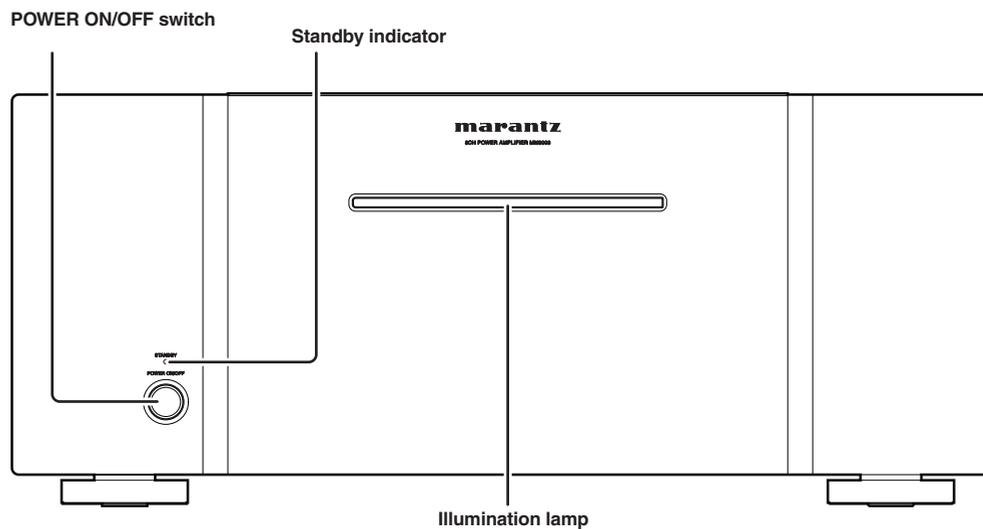

ADVANCED CONNECTIONS

BI-AMPLIFIER CONNECTIONS

Four channels of this unit's power amplifiers are used to achieve bi-amplifier connections to the front speaker systems.

Before connecting the speaker systems, check that they support bi-amplifier connections.


What are "bi-amplifier connections"?

This is a technique for enhancing sound quality, and it involves connecting separate power amplifiers to the bass and mid-range/treble speakers.

By adopting this technique, interference in the mid-range and treble sound caused by the back electromotive force generated by the bass speaker unit can be minimized, improving the sound that can be delivered through the front speakers.

Notes:

- Balanced cables are used in the connection example shown. (Unbalanced cables can also be used for bi-amplifier connections.)
- If the front speaker systems are used in combination with the AV8003 in a bi-amplifier connection, sound will no longer be heard from the surround back channels.

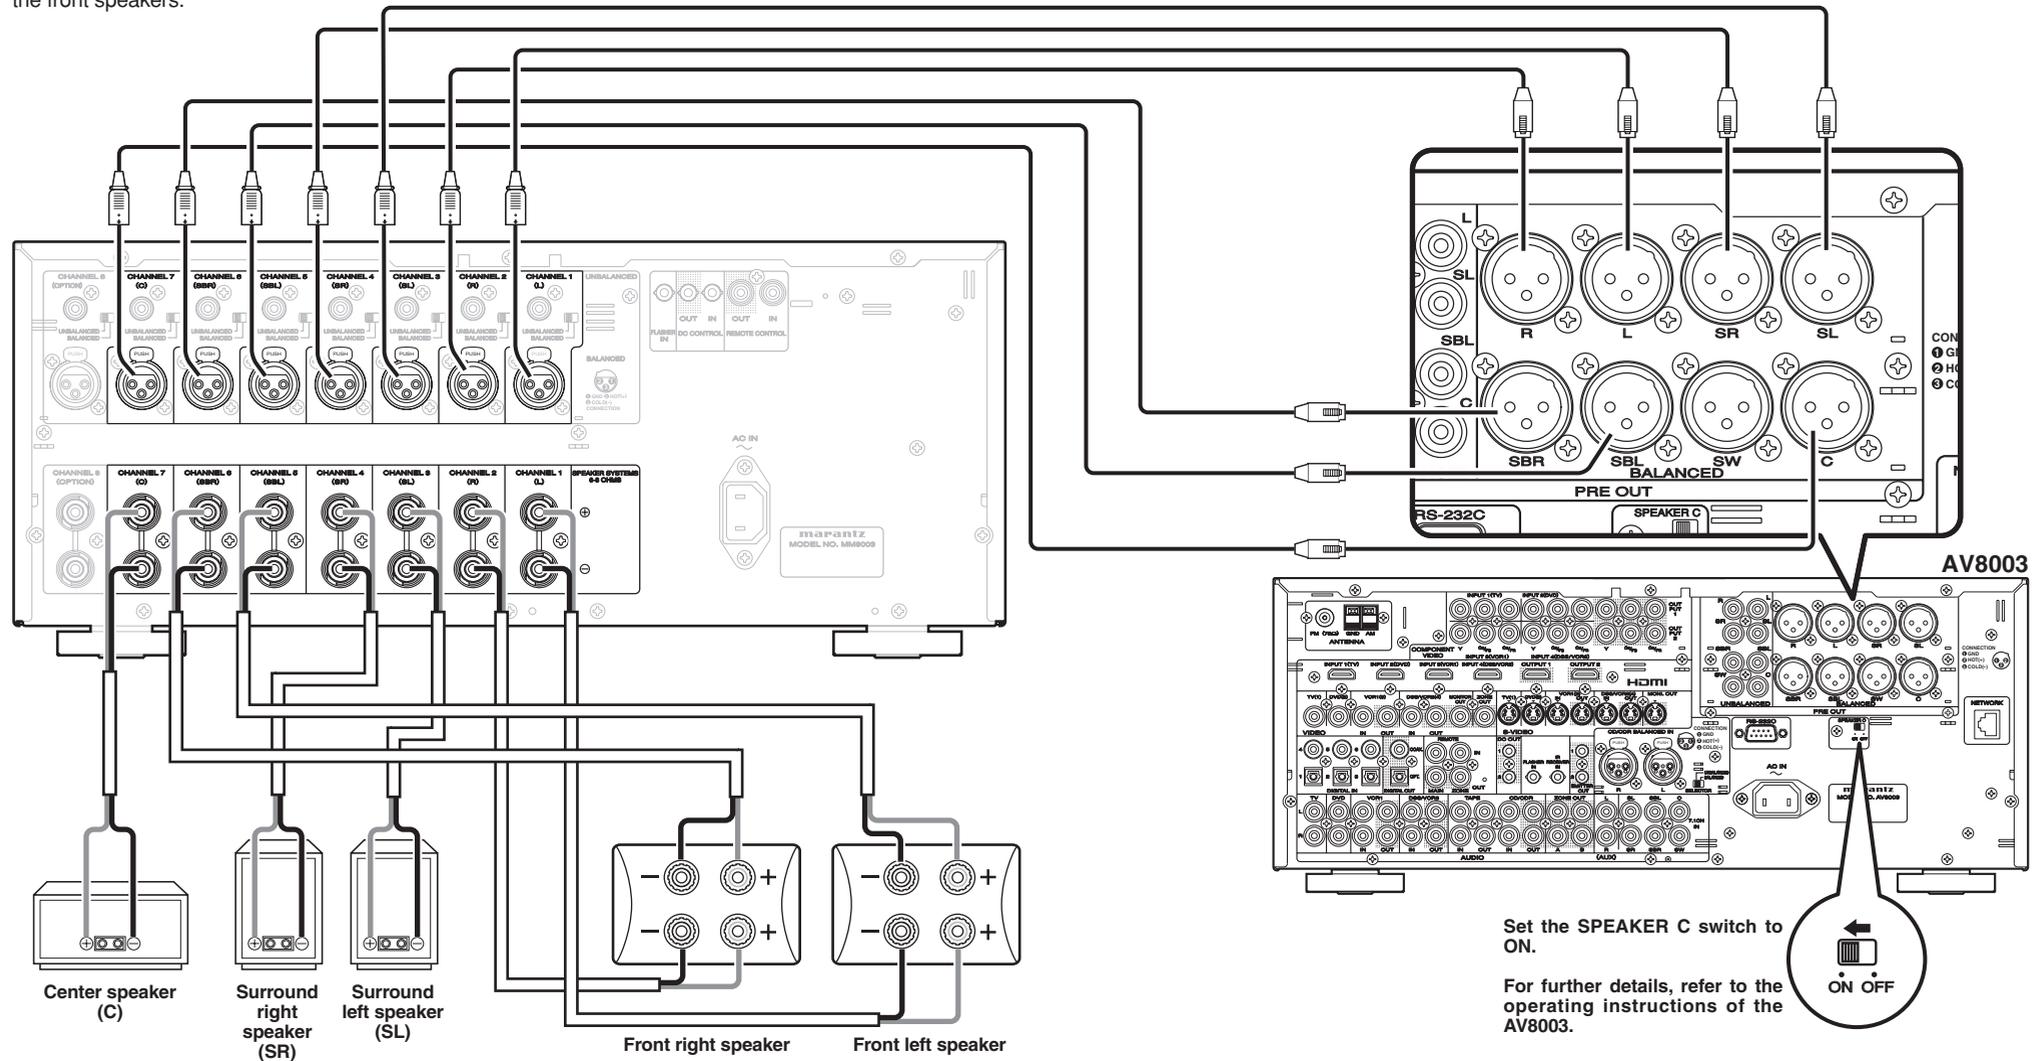


Set the **SPEAKER C** switch to **ON**.

For further details, refer to the operating instructions of the AV8003.




MULTI ZONE SPEAKER CONNECTIONS

The example given here shows the connections performed when two pairs of this unit's power amplifiers are used for multi zone speakers in combination with the AV8003. For details on the multi zone speaker function, refer to the operating instructions of the AV8003.

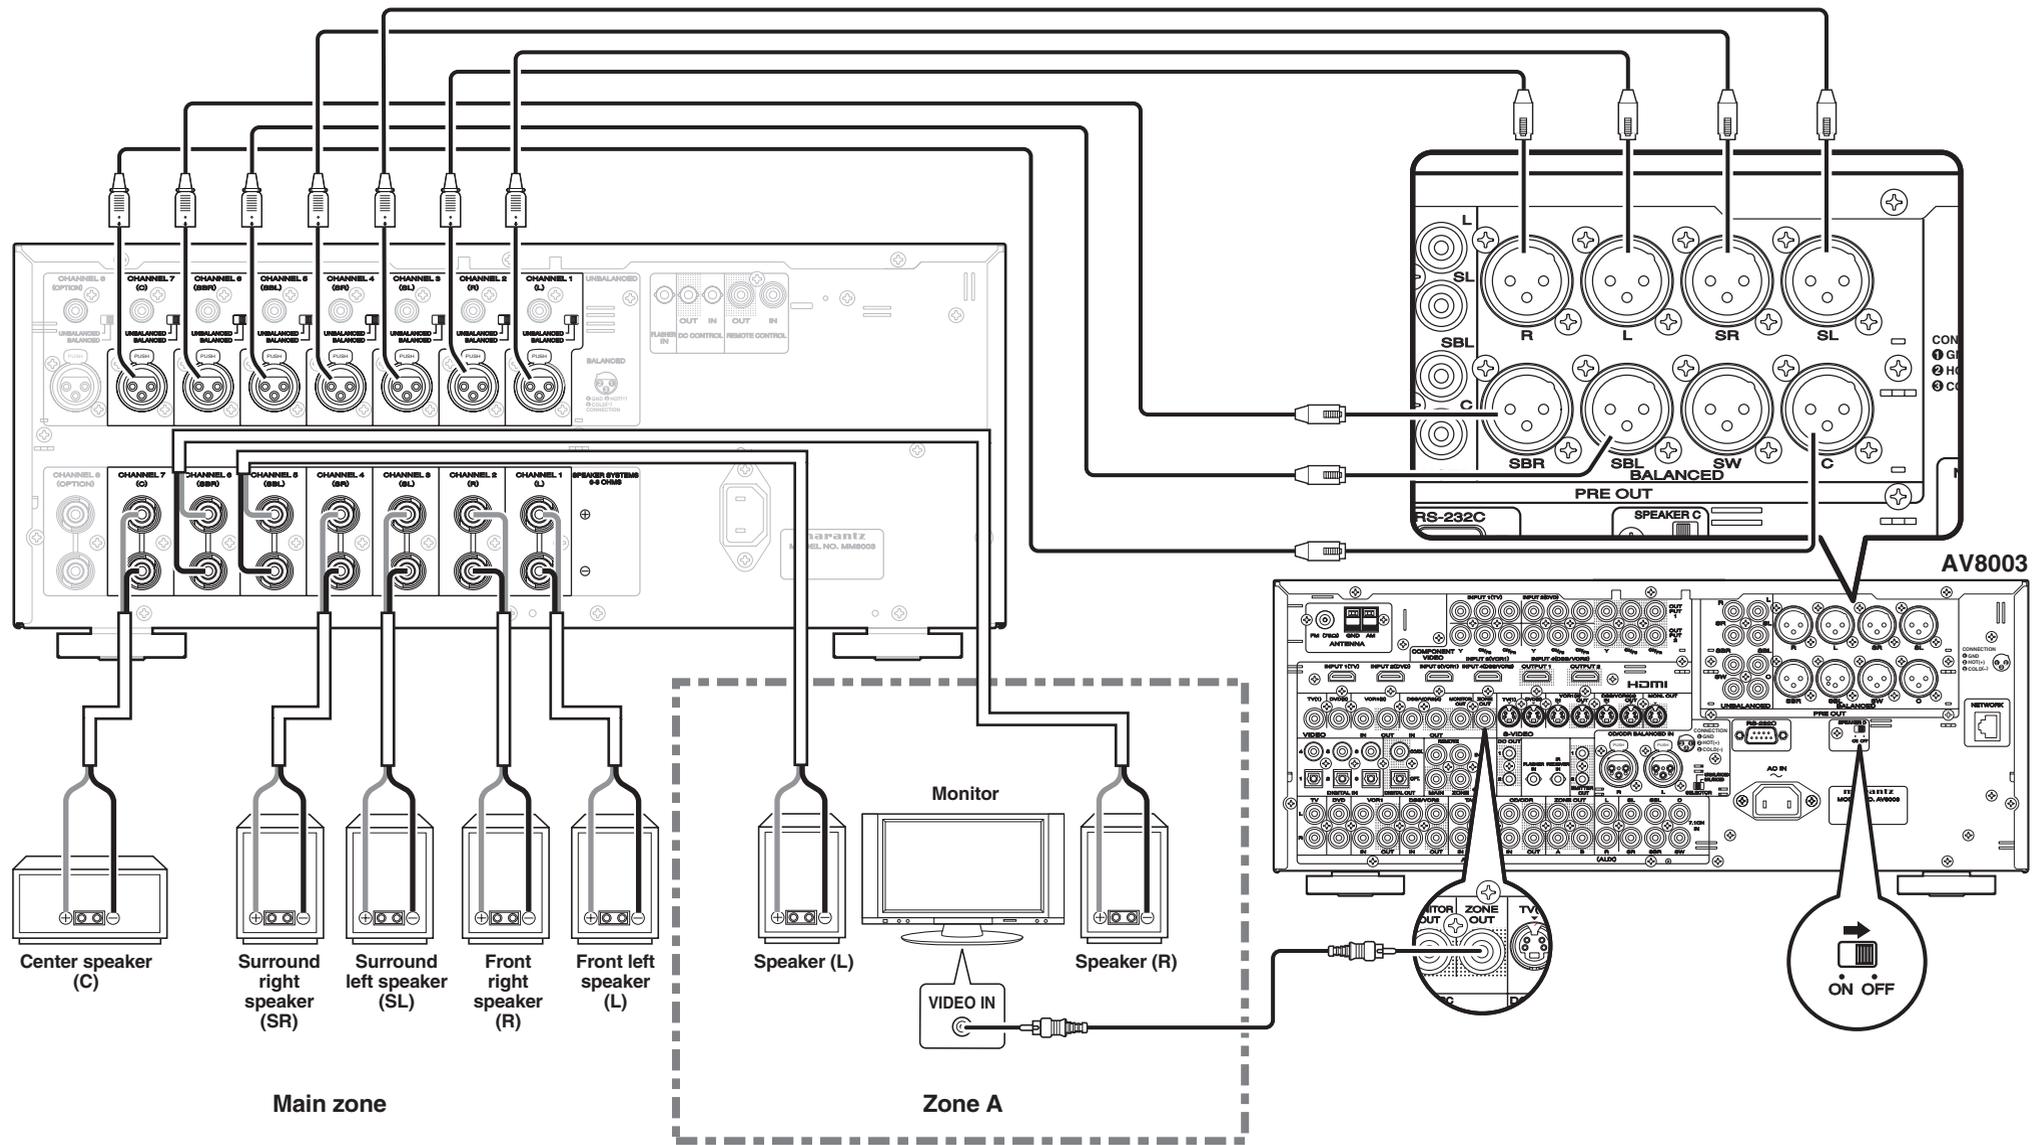

MULTI ZONE CONNECTIONS



The example given here shows the connections performed where six pairs of this unit's power amplifiers are connected in combination with the AV8003 for multi zone use. These connections allow the sound to be played in stereo in up to four rooms, including the main room. For details on the multi zone function, refer to the operating instructions of the AV8003.

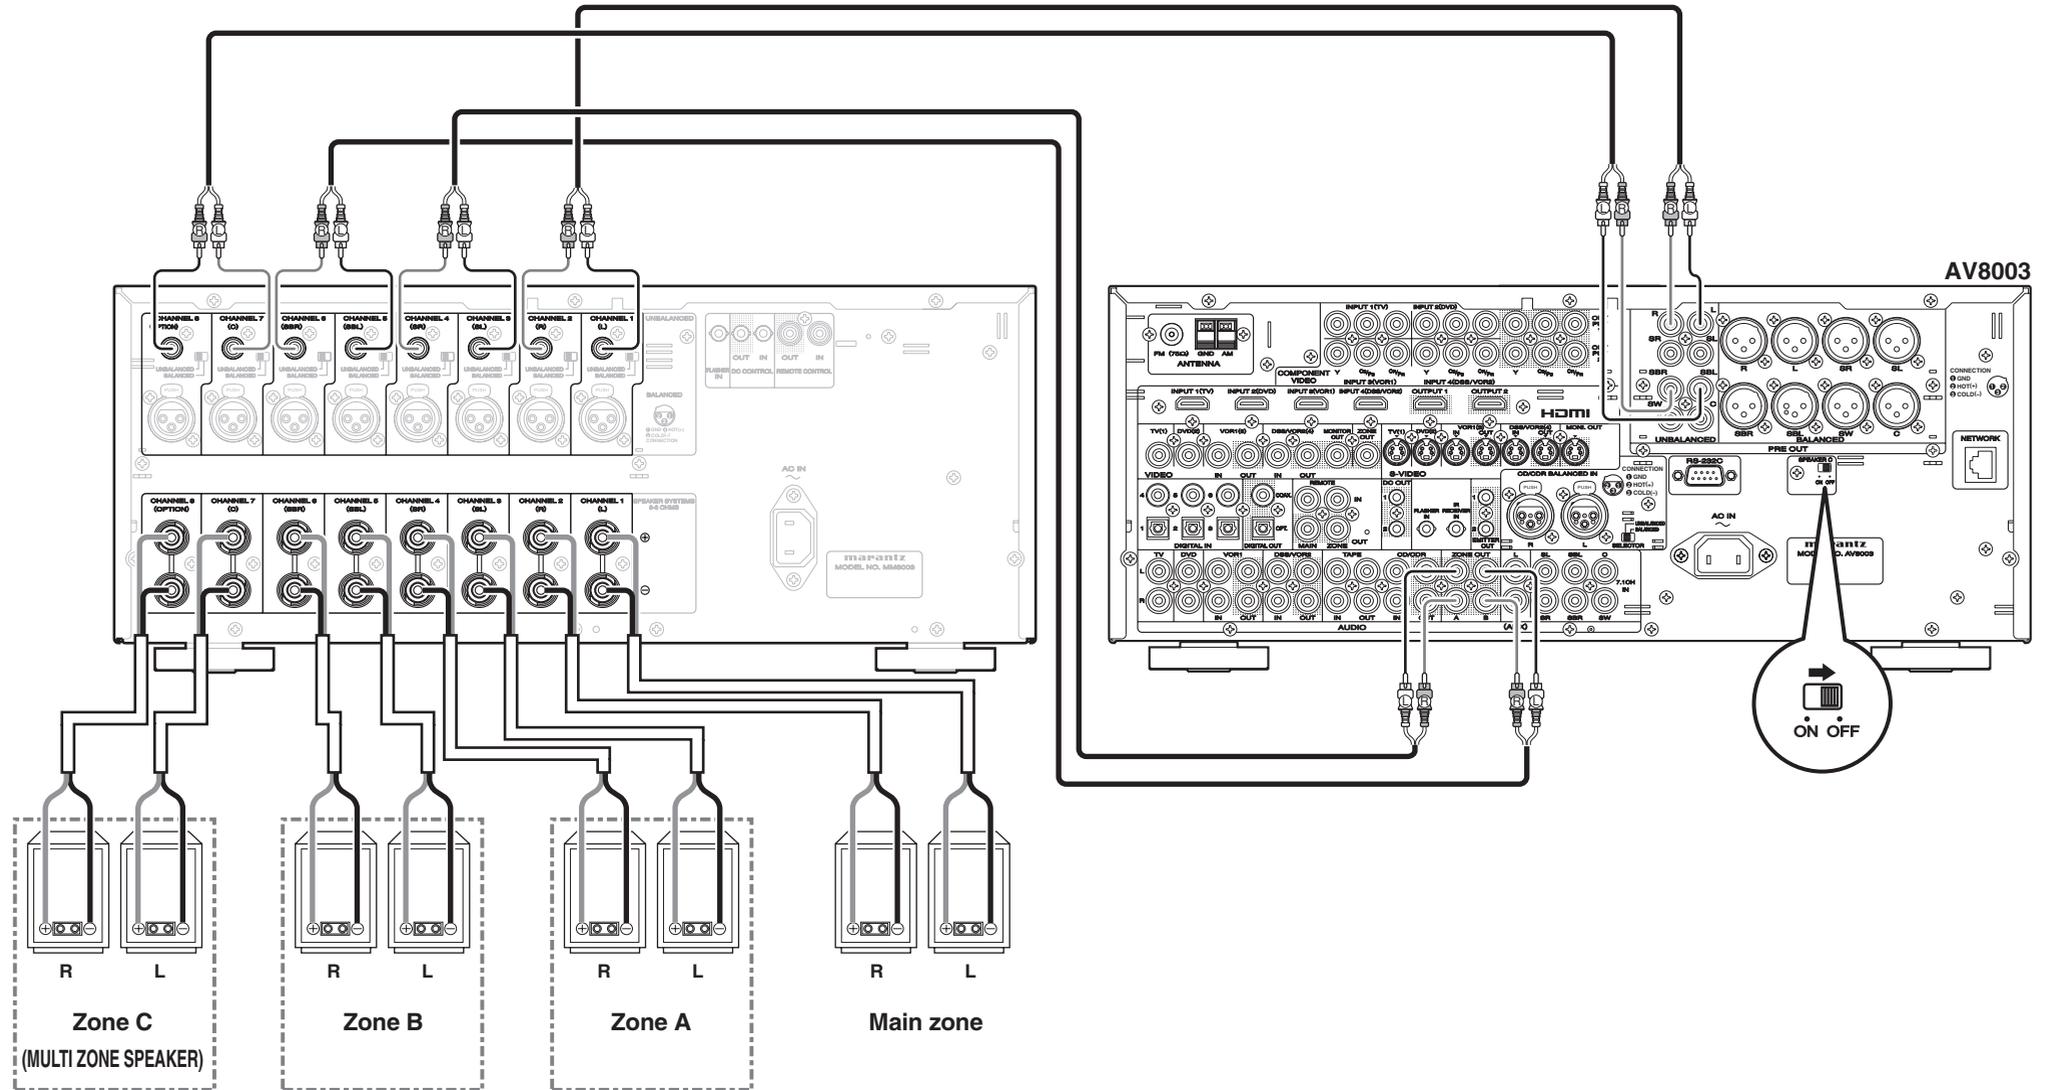


REMOTE CONTROL CONNECTIONS

By connecting the remote control connectors on the AV8003 and this amplifier, the amplifier can be set to STANDBY ON/OFF synchronized with the STANDBY ON/OFF operations of the AV8003. For the connection, use the accessory RCA cable to connect the REMOTE CONTROL OUT connector on the AV8003 and the REMOTE CONTROL IN connector on this amplifier. For details on operation, refer to the operating instructions of the AV8003.

AV PRE TUNER AV8003

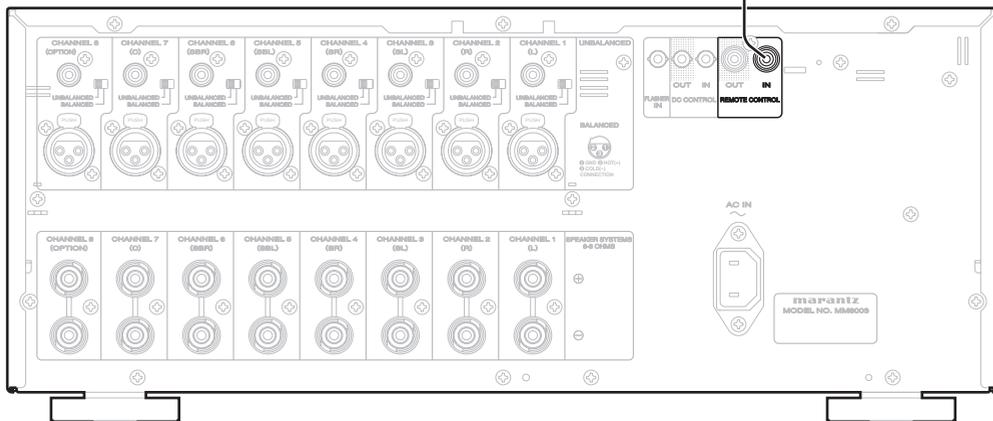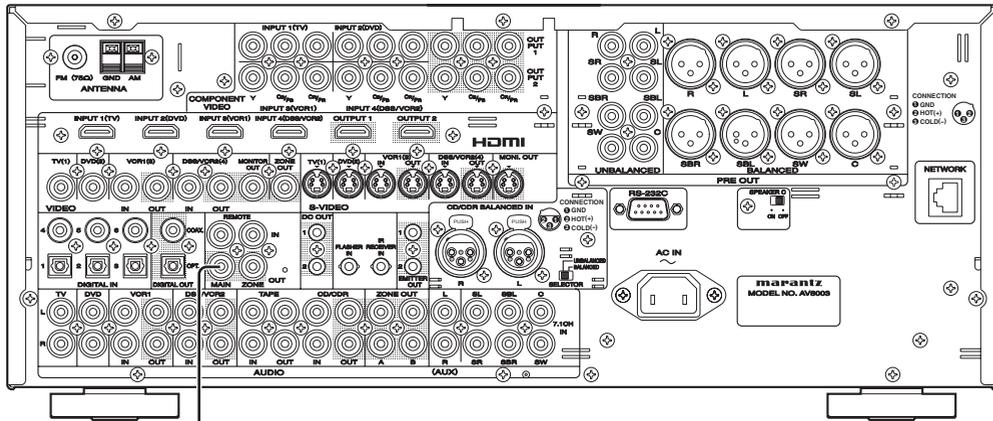


CONNECTIONS WITH EXTERNAL CONTROL COMPONENTS

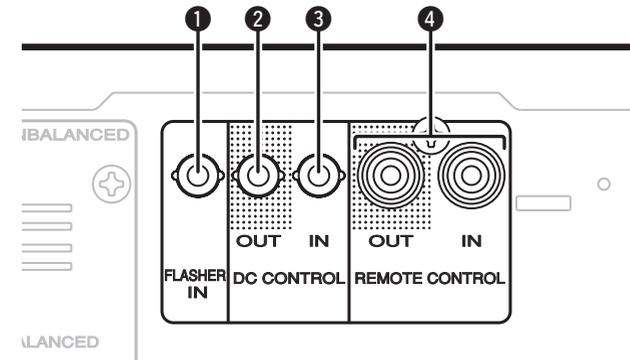

1 Flasher input connector


This is used to control the amplifier from the rooms using a key pad or other device.

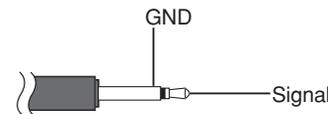

2 DC CONTROL OUT connector

This is used to control external components in tandem with the power on/off operation of this amplifier.

When the amplifier power is OFF, a voltage of 0 V is output from the DC CONTROL OUT connector; when it is ON, a DC 12 V voltage is output.

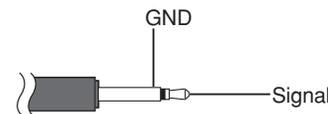

Notes:


- The maximum output current of the DC CONTROL OUT connector is 44 mA. Check the operating instructions of the components to be connected before performing the connections.
- Do not use the DC CONTROL OUT connector as the power supply for external components.

3 DC CONTROL IN connector

This is connected to an external component equipped with a DC CONTROL OUT connector.

The amplifier's power on or standby mode can be selected in tandem with the power on/off operation of the component that has been connected to this connector.

For details, refer to the operating instructions of the connected component.

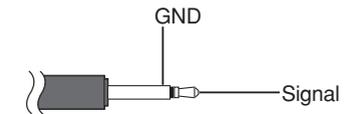

Note:

The amplifier's power is turned on when a voltage in the range of DC 5-15 V is input to the DC CONTROL IN connector. (Standby mode is established with a 0 V input.)

Bear in mind that malfunctioning may result when a voltage higher than 15 V is input.

4 Remote control connector

This is used when configuring a system with another Marantz product and using it to control this amplifier. Connect the REMOTE CONTROL OUT connector of the other Marantz product to the REMOTE CONTROL IN connector of the amplifier and the REMOTE CONTROL IN connector of the Marantz product to the REMOTE CONTROL OUT connector of the amplifier.

Note:

By connecting the amplifier to the AV8003, the amplifier's power can be set to on or standby in tandem with the power on/standby operations of the AV8003. For details, refer to the operating instructions of the

TROUBLESHOOTING

If you believe something is wrong with your amplifier, check the following points. Unintentional errors in operation or mistakes made in the connections are sometimes misinterpreted as failure.


If the failure persists even after checking the below points, contact your dealer, your nearest Marantz Consumer Marketing office or customer center, or a Marantz service center.

Symptom	Cause	Remedy	Related page
The amplifier's power fails to come on.	The power plug is not connected.	Insert the power plug into the wall outlet.	7
No sound can be heard from the speakers.	The connecting cables (input) or speaker cables have been incorrectly connected.	Check the cable connections.	5, 6
	The setting of one or more of the input selector switches does not correspond to the input connector (BALANCED or UNBALANCED) to which the cable has been connected.	Set the input switch to the position that corresponds to the input connected to the amplifier.	4
The power suddenly goes off, and the standby indicator blinks slowly (about two times a second).	The temperature inside the amplifier has risen, tripping the protection circuit.	<ul style="list-style-type: none"> Turn off the power, and wait until the amplifier's temperature has fallen to a low enough level before turning the power back on. Check whether the amplifier has been installed in a position that interferes with the dissipation of its heat. 	2
	The protection circuit has been tripped because two conductors ("+" and "-") of a speaker cable are touching each other or because the conductors have made contact with the rear panel or another metal part.	<ul style="list-style-type: none"> Turn the power off, and check the speaker cable connections. Re-process the ends of the conductors of the speaker cables. 	6
	Sound is being played at a volume higher than the performance of the amplifier can deliver.	Turn the power off, turn down the volume control on the control amplifier connected to this amplifier, then turn the power back on.	-
	Speakers with an impedance below the specified rating (6 Ω) are being used.	Use speakers with the specified impedance.	6
The power suddenly goes off, and the standby indicator blinks rapidly (about eight times a second).	The amplifier's protection circuit has been tripped.	Disconnect the power plug from the power outlet, and ask your nearest service center to repair the amplifier.	14

RESETTING THE AMPLIFIER

This amplifier features a microcontroller.

The microcontroller can be reset by following the steps below.

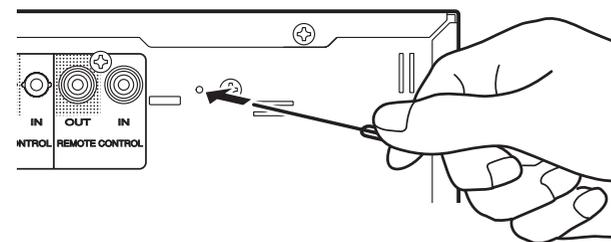

1. Set the amplifier to standby or turn its power on.
2. Use the tip of a needle or other sharp-pointed object to press the reset switch in the hole indicated by the arrow for at least 1 second.
3. When the amplifier power is already on, the amplifier is first set to standby mode, after which the microcontroller is initialized, and the power is turned back on.

When the microcontroller is reset with the amplifier in standby mode, it is initialized, then the power is turned back on.

OTHERS

SPECIFICATIONS

Rated power output (from 20 Hz to 20 kHz/THD = 0.08 % two channels driven)

.....	140 W / ch 8 Ω
.....	170 W / ch 6 Ω

Output bandwidth (8-Ω load, 0.09%)

.....	5 Hz – 40 kHz
-------	---------------

Frequency response (1 W, 8 Ω)

.....	8 Hz – 100 kHz (± 3 dB)
-------	-------------------------

Damping factor

.....	100
-------	-----

Input sensitivity/impedance

.....	1.2 V/ 22 k Ω (UNBALANCED)
.....	2.4 V/30 k Ω (BALANCED)

Signal-to-noise ratio (IHF-A)

.....	105 dB
-------	--------

Voltage amplification level

.....	29 dB
-------	-------

Supply voltage

.....	AC230V 50/60 Hz
-------	-----------------

Power consumption

.....	880 W
-------	-------

Standby power

.....	0.4 W
-------	-------


Weight

.....	17.9 kg
-------	---------

Accessories

Power cable	1
Remote control cable	1
Operating instructions (this document)	1

OUTSIDE DIMENSIONS

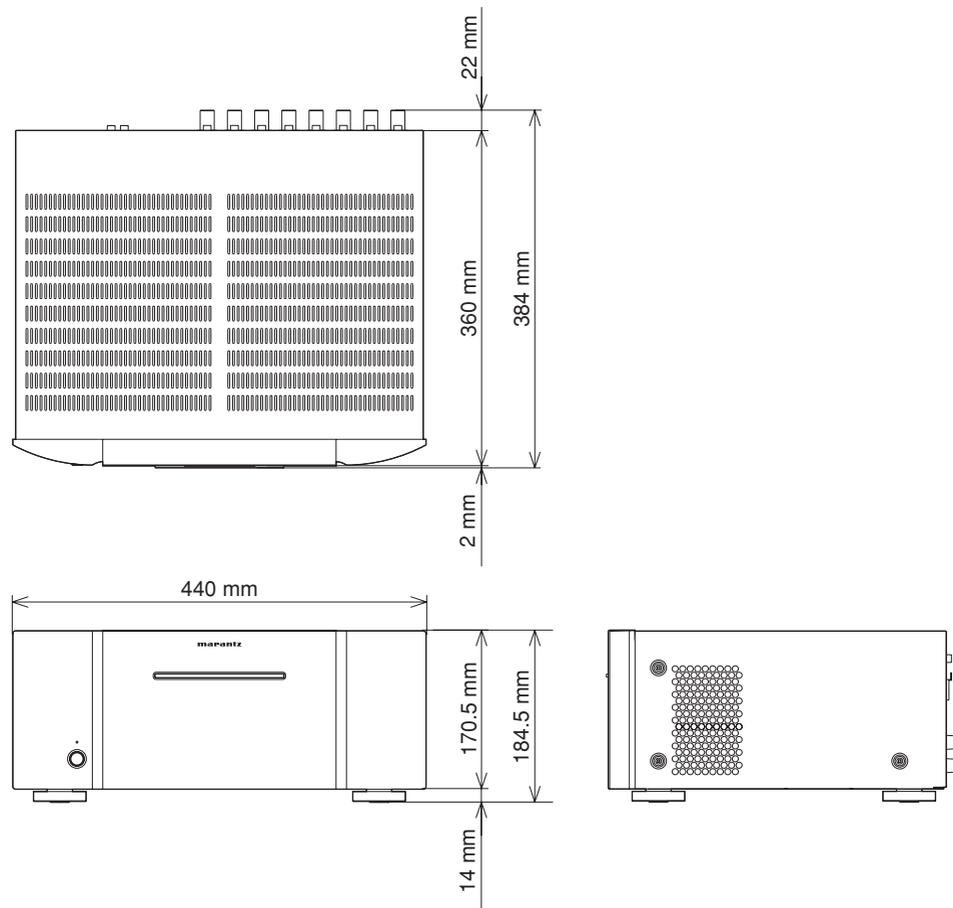

The section describes the care and maintenance tasks that must be performed to optimize the operation of your Marantz equipment.

CLEANING OF EQUIPMENT EXTERNAL SURFACES

The exterior finish of your unit will last indefinitely with proper care and cleaning. Never use scouring pads, steel wool, scouring powders or harsh chemical agents (e.g., lye solution), alcohol, thinner, benzene, insecticide or other volatile substances as these will mar the finish of the equipment. Likewise, never use cloths containing chemical substances. If the equipment get dirty, wipe the external surfaces with a soft, lint-free cloth.

If the equipment becomes heavily soiled:

- dilute some washing up liquid in water, in a ratio of one part detergent to six parts water.
- dip a soft, lint free in the solution and wring the it is damp.
- wipe the equipment with the damp cloth.
- dry the equipment by wiping it with a dry cloth.



REPAIRS

Only the most competent and qualified service technicians should be allowed to service the factory-trained warranty station personnel have the knowledge and special facilities needed for repair and calibration of this precision equipment. After the warranty period has expired, repairs will be performed for a charge if the equipment can be returned to normal operation.

In the event of difficulty, refer to your dealer or write directly to the nearest location to you that is listed on the Marantz Authorized Service Station list. If writing, please include the model and serial number of the equipment together with a full description of what you think is abnormal about the equipment's behaviour.

www.marantz.com

You can find your nearest authorized distributor or dealer on our website.

marantz[®] is a registered trademark.

